

BASIC PROCEDURE FOR MOBIAK EXTINGUISHERS MAINTENANCE Portable Carbon dioxide extinguishers - CO2.

According to MOBIAK manufacturer's instructions.

This procedure is suitable for MOBIAK (carbon dioxide-CO2 fire extinguishers)

Carbon dioxide permanent pressure devices - CO2

- 1. Fire extinguishers 2 kg (reference MBK12-020CA-P1A, MBK06-020PA-P1D)
- 2. Fire extinguishers 5 Kg (reference MBK02-050CA-P1A, MBK06-050PA-P1D)

CO2 EXTINGUISHER VERIFICATION INSTRUCTIONS

- 1. Clean the fire extinguisher with a clean cloth
- **2.** Dismantle the horn for CO2 of 2 kg or hose for CO2 of 5 kg with the appropriate tools.
- 3. Check by blowing that the horn or hose holes are clean
- **4.** Check that the nozzle or hose is not damaged and replace it if it is
- **5.** Check the total mass by weighing the fire extinguisher with the electronic weight scale without nozzle and hose
- **6.** Check the safety seal for proper operation by removing and replacing the seal with a new
- 7. Replace the o-ring of flexible hose using the appropriate tools
- 8. Complete the verification sticker and stick it to the fire extinguisher
- **9.** Check that the hook is secure, that the fire extinguisher is clearly visible and that the handle does not exceed 1.50 meters.
- **10.** Complete the Security Register and update the Implementation

WARNING

- 1. Empty fire extinguisher less than 5 years old = refill at the factory (per competent person / maintenance center)
- **2.** Empty fire extinguisher over 5 years = change of agent CO2 or replacement with new
- 3. Fire extinguisher over 10 years = hydraulic test of cylinder or replacement with new

PERIODICITY OF MAINTENANCE

- A) Monthly inspection by the user (visual)
- B) Annual Maintenance by professional
- C) Complete revision (requalification and return to service) every 10 years



Thorough control process at 10 years after manufacturing of fire extinguishers

1	The above processes are performed at the same time as the processes in this table.
2	Hydraulic test of cylinder in a competent maintenance center or change extinguisher
	with new
3	Replace parts of fire extinguisher completely, discard damaged parts and replace
	with new ones.
4	Replace or check the safety mechanism according to the manufacturer's instructions
5	Assemble and recharge the fire extinguisher. Fit the new safety seal and the control
	label.

Only use spare parts that comply with MOBIAK specifications.